

A. Refrigerator compartment

1. Crisper drawer
2. Cover crisper
3. Shelves / shelf area
4. Thermostat control knob/light
5. Door trays
6. Bottle shelf
7. Rating plate (at side of crisper drawer)

cool zone
 intermediate temperature
 cold zone

 
B. Freezer compartment ❄️❄️❄️

8. Rack
9. Area for fast freezing of fresh food products
10. Storage area for frozen or deep-frozen food
11. Ice cube tray
12. Freezer compartment inner door panel.

Note: the number of shelves and the design of accessories may vary depending on the model. Shelves and door trays are all removable.

Warning: refrigerator accessories are not dishwasher-resistant.

Controls

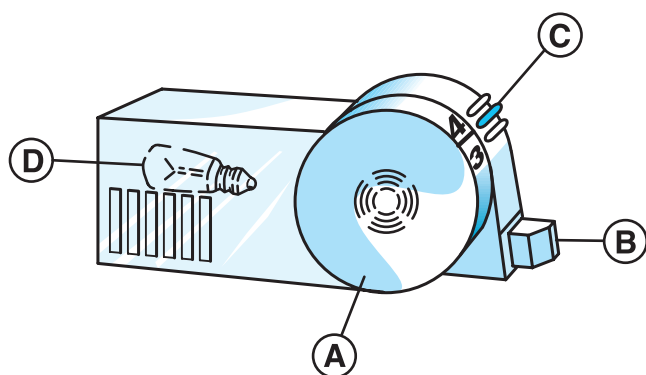


- A. Thermostat knob
- B. Light switch
- C. Thermostat setting index
- D. Bulb (15 W max.)

Thermostat set to ●: refrigerator and lights off
 Thermostat set to **1**: **warmest** internal temperature
 Thermostat set to **7**: **coldest** internal temperature


It is advisable to set the thermostat to positions 2-3

Note: external air temperature, the frequency with which the door is opened and the position of the appliance may affect the internal temperature of the refrigerator. Set the thermostat accordingly.

Removing the light

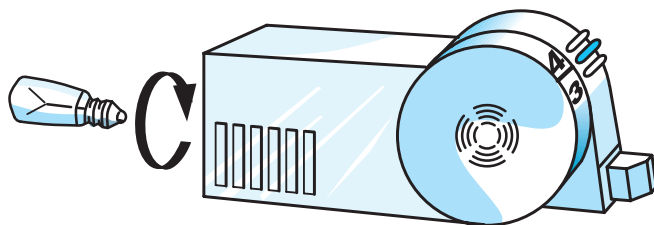

Undo by turning anticlockwise, as shown in the illustration.

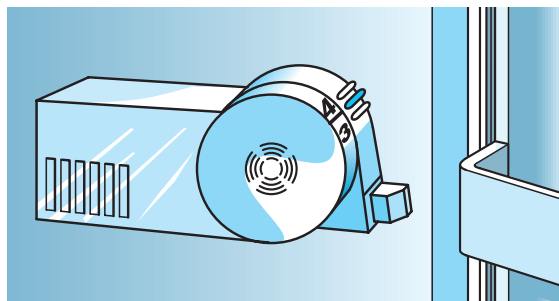

The door tray must be positioned as indicated to operate the interior light button.